



Intraplex[®] SynchroCast3[™] System Installation & Operation Manual

Version 2

*Intraplex® SynchronoCast3™
Installation and Operation Manual
Version 2, April 2008*

© Copyright 2008 Harris Corporation.
All rights reserved.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Warranty

The information contained in this document is subject to change without notice. Harris makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Harris shall not be liable for errors contained herein or for incidental or consequential damage in connection with the furnishing, performance, or use of this material.

Trademark Credits

IntraGuide®, NetXpress™, SynchronoCast®, and SynchronoCast3™ are trademarks of Harris Corporation. Other trademarks are the property of their respective owners.

How to Contact Us

Harris Corporation
Intraplex Products
4393 Digital Way
Mason, OH 45040
USA

Sales: +1 513 459 3400

Fax: +1 513 701 5316

E-mail: intraplex@harris.com

Web: www.broadcast.harris.com

How to Get Support

If you have a technical question or issue with your Intraplex Products equipment, please check our customer support web page —

www.broadcast.harris.com/support/productsupport.asp

You can also call the Technical Support line (+1 217 222 8200) or send non-emergency e-mail to tsupport@harris.com.

Version	Date	Revisions Made	Pages	Editor
2	4/30/08	Updated manual for IP capabilities, added new Implementation Scenarios section, added new template, and reformatted.	All	Lacona Darrah

Table of Contents

Section 1 –SynchroCast3 System Introduction.....	1-1
1.1 SynchroCast3 Simulcasting Capabilities	1-1
1.2 SynchroCast3 Components	1-2
1.2.1 SynchroCast3 over IP Networks	1-2
1.2.2 SynchroCast3 over T1 Networks.....	1-2
1.2.3 SynchroCast3 over E1 Networks.....	1-2
Section 2 – Theory of Simulcast Operations	2-1
2.1 Criteria for Good Reception	2-1
2.2 Distribution Networks	2-3
2.3 Delay Measurement and Adjustment	2-4
Section 3 – Installation	3-1
3.1 Basic Equipment Components	3-1
3.1.1 Basic Components and Add-on Lists.....	3-1
3.1.2 Varied Shipping and Installation.....	3-2
3.2 System Considerations	3-2
3.3 SynchroCast3 System Installation	3-3
3.3.1 Unpack and Inspect the Equipment.....	3-3
3.3.2 Install Multiplexer Shelves and GPS Equipment (All Sites)	3-3
3.3.3 Set Up SynchroCast3 Cabling.....	3-4
3.3.4 Wire Power, Analog, Data, and Network Connections	3-5
Section 4 – Configuration & Operation	4-1
4.1 Local or Remote Control Operation	4-1
4.1.1 Set SCB Address.....	4-1
4.1.2 Set Remote Control.....	4-2
4.2 SynchroCast3 Modules	4-2
4.2.1 Set Data Switches.....	4-3
4.2.2 Set Timeslot Switches.....	4-4
4.3 Indicator Lights, Alerts, and Alarms.....	4-6
4.4 Remote Control Interface.....	4-7
4.4.1 Configure SNC-101S and SNC-101T Modules in NetXpress System.....	4-8
4.4.1.1 Configure SNC-101S in NetXpress System	4-8
4.4.1.2 Configure SNC-101T in NetXpress System	4-11
4.4.2 Configure SNC-101S and SNC-101T Modules in IntraGuide	4-15
4.4.2.1 Use IntraGuide Module Configuration Screens	4-15
4.4.2.2 Use IntraGuide Module Status Screens.....	4-17
4.5 Simulcast Time Delay	4-20
4.5.1 Adjust Individual Site Delays	4-21

4.5.1.1 Establish Link	4-21
4.5.1.2 Adjust Individual Sites	4-21
4.5.1.3 Check Signal Synchronization	4-22
4.5.1.4 Provide Jitter Buffer Depth	4-22
4.5.2 Final Tune Up	4-22
4.5.2.1 IntraGuide Time Delay Common Module Screens	4-22
4.5.2.2 Considerations for Establishing Delay Settings.....	4-24
4.6 GPS Equipment	4-24
4.6.1 Equipment Requirements	4-24
4.6.2 Qualified Receivers.....	4-24

Section 5 – Implementation Scenarios 5-1

5.1 Scenario Types.....	5-1
5.2 T1/E1 Data Links Connecting 2 Remote Transmitters	5-1
5.2.1 Equipment at Origination Point.....	5-1
5.2.2 Equipment at Each Transmitter Site.....	5-1
5.2.2.1 Enable Time Delay Option	5-2
5.2.2.2 Grant Control of Time Delay Option to SNC-101T Module	5-2
5.2.2.3 Set Delay Amount.....	5-3
5.2.3 System Alignment.....	5-3
5.3 Co-located Transmitter with T1/E1 to 1 Remote Site.....	5-3
5.3.1 Equipment at Co-location Point	5-3
5.3.1.1 Take Manual Control of Time Delay Option.....	5-4
5.3.1.2 Set Local Transmitter Delay Amount	5-4
5.3.2 Equipment at Remote Transmitter Site.....	5-4
5.3.2.1 Grant Control of Time Delay Option to SNC-101T Module	5-5
5.3.2.2 Set Delay Amount.....	5-5
5.4 Originate-Once in T1/E1 Systems.....	5-5
5.4.1 Originate-Once in T1/E1 Multiplexer for Field Distribution.....	5-6
5.4.2 Originate-Once in T1/E1 CrossConnect Multiplexer.....	5-7
5.4.3 Equipment at Each T1/E1 Cross-Connect Transmitter Site.....	5-7
5.4.3.1 Grant Control of Time Delay Option to SNC-101T Module	5-8
5.4.3.2 Set Delay Amount.....	5-8
5.4.4 Equipment at Each T1/E1 End Point Transmitter Site.....	5-8
5.5 Internet Protocol (IP) Based Systems	5-8
5.5.1 Originate-Once Using IP Multicast.....	5-8
5.5.2 NetXpress Multiplexer at Origination Point Using IP Multicast	5-9
5.5.2.1 Set Timing Sources	5-9
5.5.2.2 Create IP Multicast Stream.....	5-9
5.5.3 NetXpress Multiplexer at Transmitter Site Using IP Multicast	5-10
5.5.3.1 Create IP Multicast Stream.....	5-10
5.5.3.2 Request Time Delay	5-11
5.5.4 Originate-Once with NetXpress Multiplexer using IP Multi-Unicast	5-11
5.5.5 Origination Point with NetXpress Multiplexer using IP Multi-Unicast	5-11
5.5.5.1 Set Timing Sources	5-12
5.5.5.2 Configure NetXpress System for Multi-Unicast	5-12
5.5.5.3 Create IP Unicast Streams.....	5-13
5.5.5.4 Create TDM-to-TDM Streams	5-13
5.5.5.5 Configure Expansion NetXpress System for Multi-Unicast Streams.....	5-13
5.5.6 Transmitter Site with NetXpress Multiplexer using Unicast Transmission.....	5-14
5.5.6.1 Create Unicast Receive Stream	5-15
5.5.6.2 Request Time Delay	5-15

5.6 Mixed Protocol (IP & TDM) Systems.....	5-15
5.6.1 Origination Point with NetXpress Multiplexer using IP & TDM Data Links.....	5-15
5.6.1.1 Configure NetXpress TDM Map for Multi-Unicast	5-16
5.6.1.2 Create TDM-to-TDM Stream for T1/E1 Interface	5-16
5.6.1.3 Create TDM-to-IP Streams	5-16
5.6.2 Transmitter Site with NetXpress Multiplexer Using IP & TDM Data Links	5-17
5.6.3 Transmitter Site with TDM Multiplexer Using IP & TDM Data Links	5-17
Section 6 – SychroCast3 Specifications	6-1
Notice of FCC Compliance.....	6-1
Section 7 – Glossary	7-1
Appendix A – MA-480 SynchroCast3 Module Adapter	A-1
A.1 MA-480 Block Diagram and Board Views	A-1
A.2 MA-480 Switches.....	A-2
Appendix B – P and S Codes	B-1
A.1 P Codes.....	B-1
A.2 S Codes	B-4